

INSTALLATION AND CONNECTION OF PARTS


(see Installation Instructions for details)

Installation methods:

SPC Panels: *Installation on flat wall (adhesive)*

Cross-grooved Wood Panels: *Clips and Screws (included). Nails: #16, 2-2.5" long.*

STEP 1

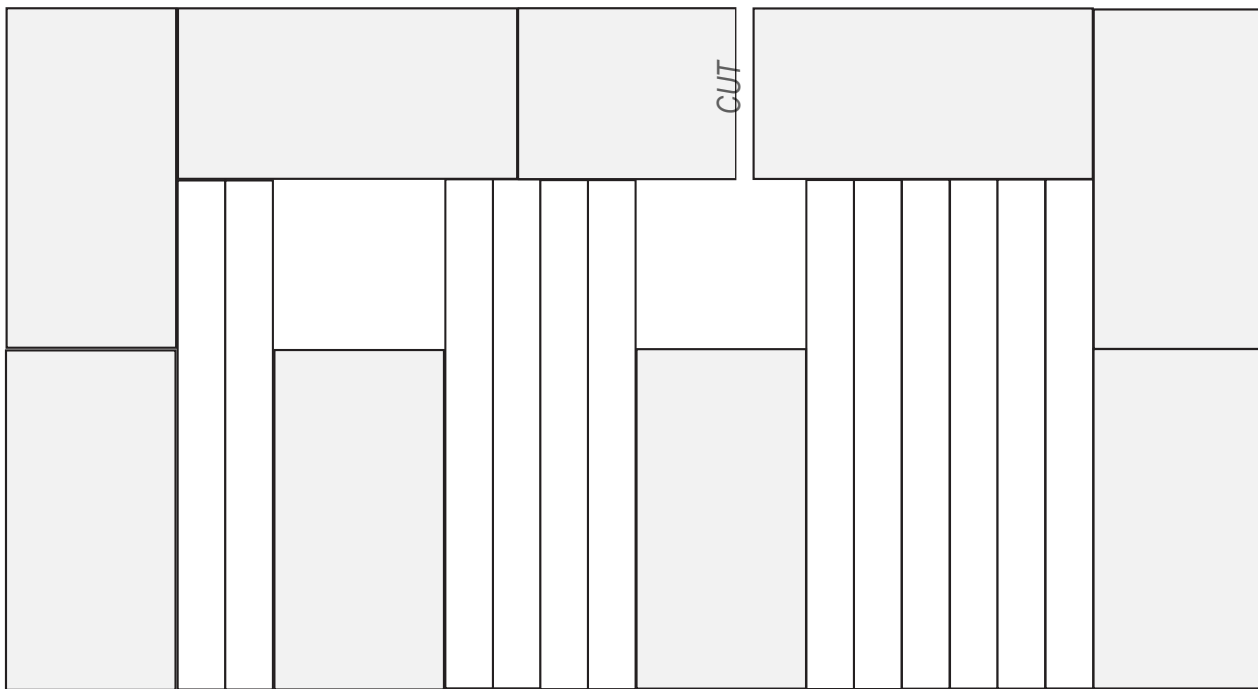


INSTALLATION AND CONNECTION OF PARTS

(see Installation Instructions for details)

Installation methods:

SPC Panels: *Installation on double furring boards (included)*

STEP 2 - ATTACH FURRING PLANKS

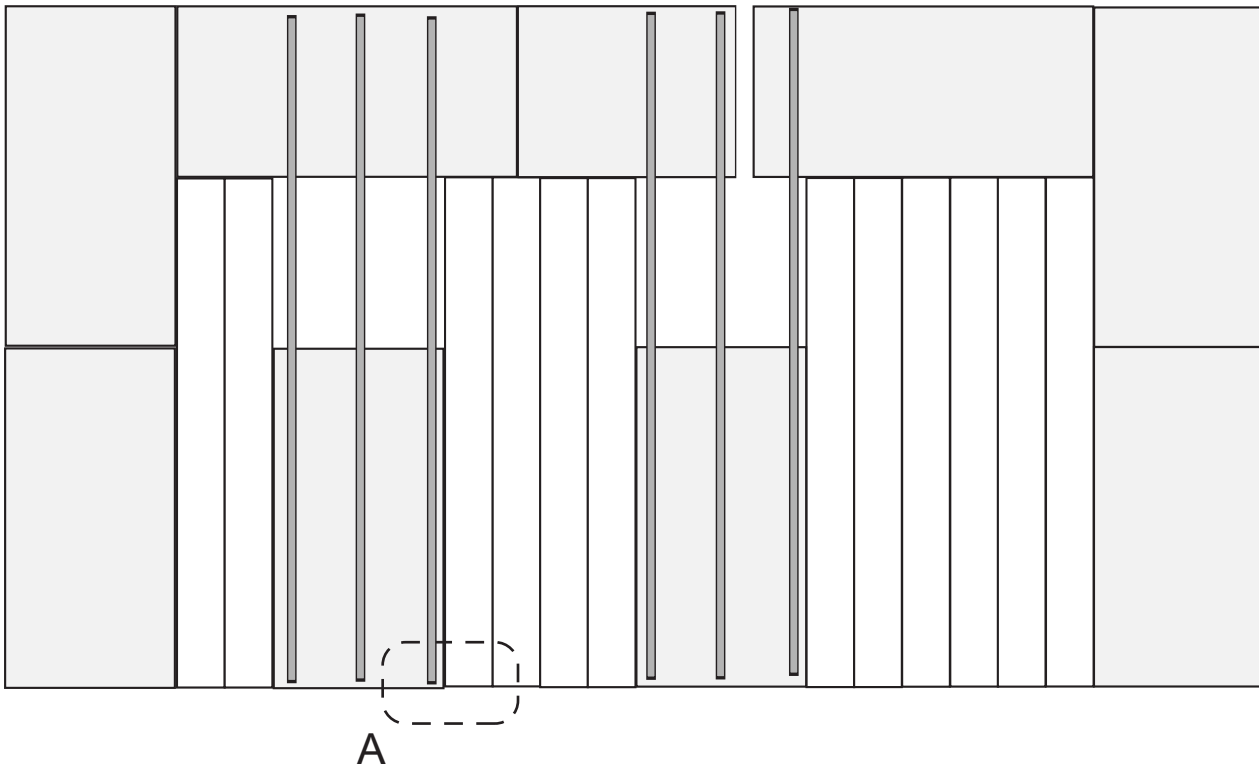

STEP 3 - GLUE GRAY PANELS

